


Flymo

L38/L47

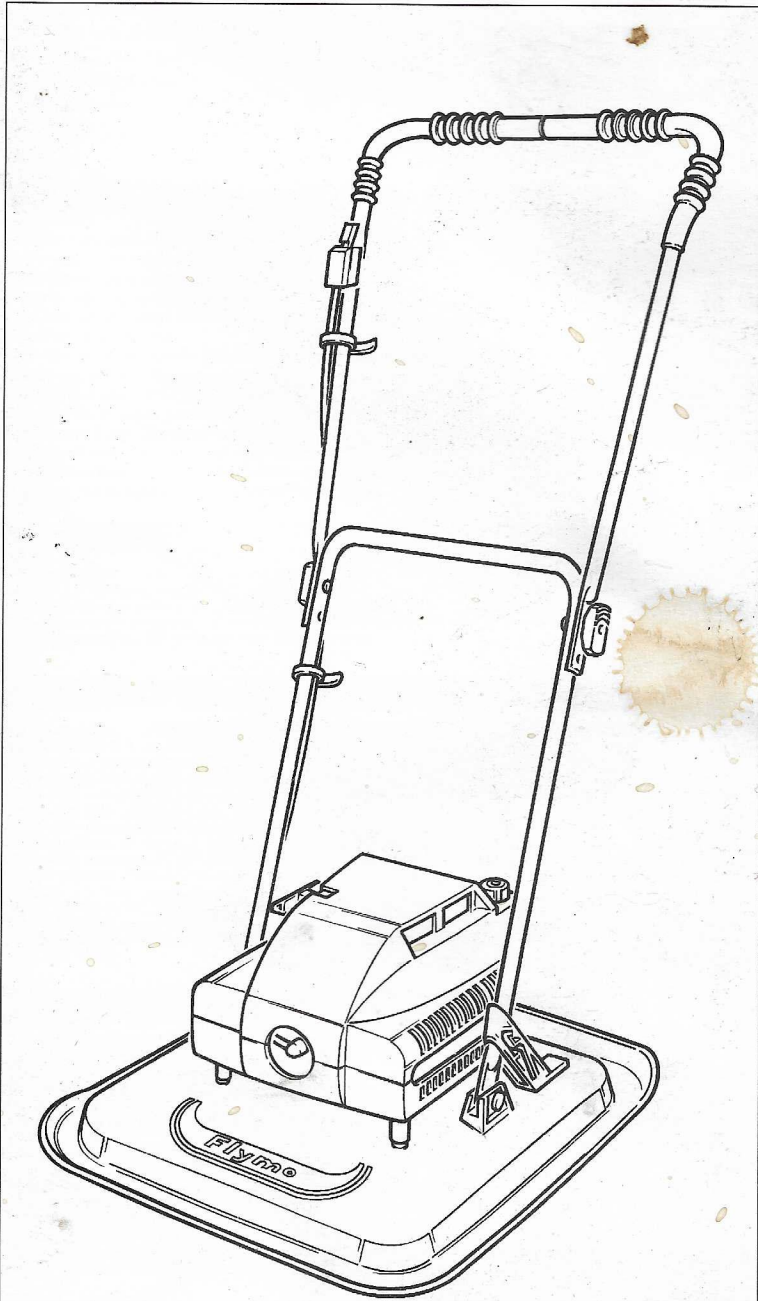

"Sécurité d'abord! Lire ce manuel
AVANT d'utiliser la tondeuse"

"Sicherheit geht vor! Lesen Sie diese
Anweisung **VOR** der
Inbetriebnahme."

"Veiligheid komt op de eerste plaats!
Lees deze gebruiksaanwijzing
VOORDAT u de grasmaaimachine
gebruikt"

"La sicurezza prima di tutto! Leggere
questo manuale **PRIMA** di falciare"

"¡La seguridad ante todo! Lea este
manual **ANTES** del manejo"

"A segurança em primeiro lugar!
Leia este manual **ANTES** de
começar a cortar relva"

"Sikkerhed
først! Gennemlæs denne
betjeningsvejledning, **INDEN** du
klipper græs" "Sikkerheten først! Les
denne håndboken **FØR** du bruker
denne
klipperen."

Säkerheten framför allt! Läs igenom
bruksanvisningen **INNAN** du börjar
använda gräsklipparen!

"Sikkerhed først! Gennemlæs
denne betjeningsvejledning, **INDEN**
du
klipper græs"

"Turvallisuus ennen muuta! Lue
tämä ohjekirja **ENNEN** leikkuuta"

"Safety first! Read this manual
BEFORE you mow!"

Congratulations on buying a Flymo L38/L47

Important!

You should read the entire operator's manual before you use your L38/L47 and you should restrict its use to persons who have read, understood, and who will follow all warnings and instructions contained in this manual. In addition you should follow all warnings and instructions affixed to your L38/L47.

Wichtiger Hinweis!

Wir gratulieren Ihnen zum Kauf eines Flymo L38/L47!

Lesen Sie vor der Arbeit mit dem L38/L47 die ganze Bedienungsanweisung und lassen Sie nur Personen mit dem Gerät arbeiten, die alle Warnungen und Anweisungen in der Anweisung gelesen und zur Kenntnis genommen haben und beachten werden. Beachten Sie auch alle am L38/L47 selbst angebrachten Warnungen und Anweisungen.

Important!

Toutes nos félicitations d'avoir acheté un taille-herbe Flymo L38/L47!

Avant de vous servir de votre L38/L47, lisez l'intégralité du mode d'emploi, et veillez à ce qu'il ne soit utilisé que par ceux qui ont lu et assimilé tous les avertissements et toutes les instructions qui figurent dans le présent manuel. De plus, il convient de respecter tous les avertissements et toutes les instructions apposés sur votre L38/L47.

Belangrijk!

Gefeliciteerd met de aankoop van een Flymo L38/L47

Leest u de gehele gebruiksaanwijzing door voordat u de L38/L47 in gebruik neemt en beperk het gebruik alleen tot personen die al de instructies en waarschuwingen in deze gebruiksaanwijzing gelezen en ook begrepen hebben en deze in acht zullen nemen. Neem tevens alle waarschuwingen en voorschriften die op de L38/L47 zelf zijn aangebracht in acht.

Viktig!

Gratulerer med din nye Flymo L38/L47!

Du må lese hele denne håndboken før du bruker din L38/L47, og alle som bruker den må ha lest, forstått og følge alle advarsler og anvisninger i denne håndboken. Du må dessuten følge alle advarsler og anvisninger som står på selve Produktet.

Tärkeää!

Onnittelumme Flymo L38/L47 ostosta!

Lue Läpi koko käyttäjän ohjekirja ennen L38/L47 käyttöä. Rajoita sen käyttö vain niille henkilöille, jotka ovat lukeneet ja käsittäneet sen sekä noudattavat kaikkia tässä ohjekirjassa olevia varoituksia ja ohjeita. Lisäksi sinun tulee noudattaa kaikkia L38/L47 kiinnitettyjä varoituksia ja ohjeita.

Viktigt!

Hela denna handbok skall läsas igenom, innan L38/L47 tas i bruk. Maskinens användning bör begränsas till personer som har läst och förstått och som kommer att följa alla handbokens varningar och anvisningar. Alla på L38/L47 sittande varningar och anvisningar skall också följas.

Vigtigt!

Til lykke med Købet af Flymo L38/L47!

Du bør læse hele betjeningsvejledningen, inden L38/L47 tages i brug, og du må kun lade personer, der har læst og forstået advarsler og instruktioner i denne vejledning og som vil følge dem, benytte trimmeren. Desuden skal alle advarslerne og instruktionerne, som sidder på selve L38/L47 maskinen, overholdes.

¡Atención!

¡Enhorabuena por haber adquirido esta Flymo L38/L47!

Lea todo el manual del usuario antes de usar esta L38/L47 y limite su uso a aquellos que hayan leído y comprendido los avisos e instrucciones en este manual, cerciorándose de que se ciñen a los mismos. Además, deben seguirse todas las instrucciones y avisos que aparecen en la L38/L47.

Importante!

Parabéns pela sua compra de um L38/L47 Flymo!

Antes de utilizar o seu L38/L47, deve ler todo o Manual do Operador, devendo também limitar a sua utilização por pessoas que leram, compreenderam e que irão seguir todos os avisos e instruções incluídos neste manual. Além disso, deve também obedecer a todos os avisos e instruções que estão afixados no seu L38/L47.

Importante!

Congratulazioni per l'acquisto di un Flymo L38/L47

Dovreste leggere l'intero manuale dell'operatore prima di usare il vostro L38/L47 e dovreste restringerne l'uso a persone che abbiano letto e compreso e che seguano le avvertenze e le istruzioni contenute in questo manuale. In aggiunta, dovreste seguire tutte le avvertenze e istruzioni affisse sul vostro L38/L47.

Guarantee

If any part is found to be defective due to faulty manufacture within one year of original purchase, Flymo, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- The fault is reported directly to the Authorised Repairer.
 - Proof of purchase is provided.
 - The fault is not caused by misuse, neglect or faulty adjustment by the user.
 - The failure has not occurred through fair wear and tear.
 - The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Flymo.
 - The machine has not been used for hire.
 - The machine is owned by the original purchaser.
 - The machine has not been used outside of the country for which it was specified.
- * In all cases if the machine is used commercially the Guarantee period is 90 days.
* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Garanti

Bei Feststellen eines fehlerhaften Teils aufgrund mangelhafter Herstellung innerhalb eines Jahres, übernimmt Flymo Limited durch autorisiert Fachwerksatten (oder Electrolux Kundendienst) die kostenlose Reparatur oder den kostenlosen Austausch für den Kunden unter folgenden Voraussetzungen:

- Der Mangel wird direkt bei einer autorisierten Fachwerkstätte angezeigt
- Kaufnachweis liegt vor.
- Der Mangel ist nicht durch falsche Verwendung, Fahrlässigkeit oder fehlerhafte Einstellung durch den Verwender entstanden.
- Der Mangel ist nicht aufgrund normaler Abnutzung entstanden.
- An dem Gerät wurde durch nicht von Flymo Limited autorisierte Personen keine Wartung oder Reparatur vorgenommen, repariert oder herumgebastelt.
- Das Gerät wird nicht gewerbsmäßig vermietet.
- Eigentümer des Gerätes ist der Erstkäufer. Wird das Gerät für gewerbliche Zwecke verwendet, so beträgt die Garantiezeit 90 Tage.

Garantie

Flymo garandeert dit produkt gedurende 12 maanden na de aankoopdatum tegen materiaal - of konstruktiefouten. Dit heeft betrekking op die onderdelen welke binnen die periode bij normaal gebruik met inachtneming van de onderhoudsvorschriften defect raken. De garantie vervalt bij ondeskundig gebruik, reparatie en vervanging van niet originele onderdelen. Dit geldt ook voor die onderdelen die aan normale slijtage onderhevig zijn.

Garantie

Si, dans un délai d'un an à compter de la date de vente, l'une des pièces s'avère défectueuse, suite à un défaut de fabrication, Flymo Ltd procédera, par l'intermédiaire de ses dépanneurs agréés (ou des points de service après-vente Electrolux), à sa réparation ou son remplacement sans aucun frais pour le client, sous réserve:

- que cette défectuosité soit signalée directement au dépanneur agréé;
- que vous fournissiez une preuve de votre achat;
- que cette défectuosité n'ait pas été occasionnée par une mauvaise utilisation, une négligence ou un mauvais réglage de la part de l'utilisateur;
- que cette défectuosité ne soit pas due à l'usure normale de l'appareil;
- que l'appareil n'ait pas été entretenu ou réparé, démonté ou bricolé par des services autres que ceux agréés par Flymo Ltd.
- que l'appareil n'ait pas été utilisé en location;
- que l'appareil soit propriété de l'acheteur initial. En tout état de cause, si l'appareil est utilisé à des fins commerciales, la durée de la garantie est de 90 jours.

Garanti

I tilfelle feil eller mangler som kan føres tilbake til produksjonen vil Flymo, ved sitt autoriserte servicepersonale sørge for reparasjon eller utskifting uten omkostning for kunden under forutsetning av at:

- Feilen meldes direkte til autorisert reparatør; eller utsalgssted
 - Kvittering legges frem;
 - Feilen eller mangelen ikke skyldes feilaktig bruk, uforsiktighet eller feilaktig justering utført av brukeren;
 - Feilen eller mangelen ikke skyldes normal slitasje;
 - All eventuell tidligere service, reparasjoner og inngrep på maskinen er utført av Flymo-reparatører;
 - Maskinen ikke er blitt leid ut;
 - Maskinen tilhører den opprinnelige eier;
- Garantien gjelder i to år fra innkjøpsdato Hvis maskinen brukes til annet enn privat bruk er garantitiden 6 måneder. Vi prøver kontinuerlig å forbedre våre produkter, noe som medfører at spesifikasjonene kan endres uten foregående varsel.

Garanti och Reklamation

Garanti och reklameringsrätt

Garanti och reklameringsfrågor behandlas enligt köplagen.

Ytterligare information kan erhållas från återförsäljaren eller leverantören: AB PARTNER. TELE 036 - 14 67 00

Tillverkad under patent i ett flertal länder.

'Flymo' är ett registrerat varumärke.

Flymo

Guarantee Policy

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- Sharpening/Replacing worn or damaged blades
- Failures as a result of not reporting an initial fault.
- Failures as a result of sudden impact.
- Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- Machines used for hire are not covered by this guarantee.
- The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Blades, belts, cables, recoil ropes, filters.

Caution!

Flymo will not accept any responsibility and the guarantee will be rendered void if replacement parts/additional parts or attachments are fitted that are not either manufactured or approved by Flymo or if the machine is modified in any way.

Garanti/Reklamation

Hvad er reklamation, og hvordan behandles den?

- Reklameringsretten gælder i 12 måneder, regnet fra leveringsdato til bruger.
 - Ved reklamation skal oprindelig købsnota altid fremlægges.
 - Reklameringsarbejdet skal udføres af et autoriseret Flymo service-værksted.
 - Greenlux A/S vil i reklamationstiden erstatte dele, som har materiale- og/eller fabrikationsfejl-incl. demontering og montering af disse.
 - Reklameringsretten gælder ikke for skader, der er opstået grundet slitage fejlagtig smørelie, brændstoffer eller uoriginale reservedele samt manglende renholdelse af maskinen, tænding og fjernkontrol.
- Kun autoriserede Flymo serviceværksteder og Greenlux A/S's serviceafdeling er berettiget til at træffe afgørelser i reklamationssager.
- Afvises en reklamation af serviceværkstedet, kan den selvfølgelig altid til GREENLUX A/S's serviceafdeling.

Garantía

Si cualquier parte se encontrara defectuosa por fallo de fabrica en curso de un año Flymo limitada a través de sus servicios autorizado o los servicios Flymo se encargarán del cambio de piezas, partes o recambios defectuosos sin cargo para el cliente.

- El desperfecto debe ser comunicado directamente al servicio autorizado.
 - Como condición debe ser enseñada su fecha de compra.
 - Si el fallo o desperfecto no es causado por mal uso, negligencia o reparación del mismo usuario.
 - Si el desperfecto no ha sido ocasionado por su uso.
 - Si la máquina no ha sido revisada o reparada por alguna persona autorizada por Flymo Limitada.
 - Si la máquina no ha sido utilizada para alquiler.
 - Si la máquina es de propiedad del comprador original.
- En los casos que la máquina sea utilizada comercialmente su garantía será 90 días.

Garantia

Se for encontrada alguma peça defeituosa devido a defeito de fabricação dentro de um ano da compra original, a Flymo Limited, através dos seus Representantes Autorizados (ou Lojas de Assistência Electrolux), efectuará o conserto ou substituição gratuitamente, desde que:

- O defeito seja informado directamente ao representante autorizado.
 - seja fornecido recibo da compra.
 - O defeito não seja causado por negligência, mal uso ajuste ou incorrecto pelo utilizador.
 - A falha não tenha ocorrido devido a desgaste regular.
 - A máquina não tenha recebido manutenção ou conserto, não tenha sido desmontada ou mexida por qualquer pessoa não autorizada pela Flymo.
 - A máquina não tenha sido usada para aluguer.
 - A máquina pertença ao comprador original.
- Em todos os casos, se a máquina for usada comercialmente, o periodo de garantia é de 90 dias.

Garanzia

Se un pezzo risulta difettoso di costruzione, la Flymo Ve lo riconosce in garanzia entro 1 anno dall'acquisto se:

- il difetto è fatto notare direttamente al Rivenditore autorizzato;
- si dimostri il regolare acquisto della macchina;
- il difetto non sia stato causato da cattivo uso, negligenza o manomissione di persone non autorizzate;
- il difetto non sia stato causato da normale consumo d'uso;
- la macchina non sia stata riparata, aperta o smontata da persone non autorizzate dalla Flymo;
- la macchina non sia stata prestata;
- la macchina sia posseduta dal compratore originale. In tutti i casi, se la macchina è usata commercialmente, la garanzia è di 90 giorni. La politica di continui miglioramenti significa che le caratteristiche possono venire modificate senza alcun preavviso. Prodotto dietro Licenza in numerosi Paesi.

Suomalainen


Takuu

A/S Flymo vaihtaa 12 kuukautta koneen myyntipäivästä lukien ilmaiseksi kaikki osat, joissa havaitaan valmistusaihevikkoja. Takuukorjaukset on suoritettava valtuutetuissa huoltokorjaamoissa. Omistaja maksaa kuljetukset kone on toimitettava puhdistettuna korjaamoon. Takuu ei koske kulumisesta, varomattomasta käytöstä, väärän polttoaineen ja voiteluyölyn sekä muiden kuin tehtaan valmistamien osien käyttämisestä aiheutuneita vikkoja. Ei myöskään kaasuttimen tai kaukosäädön saatoja. Takuu päättyy, jos koneita vuokrataan tai lainataan. Takuu ei koske henkilö- tai esinevahinkoja, jotka ovat aiheutuneet koneen käyttämisestä.


Tehdas työskentelee jatkuvasti parantaakseen tuotteitaan, ja pitää sen vuoksi si sellen oikeuden varoituksesta tehdä muutoksia leikkureihin. Leikkuri on suojattu patentilla monessa maassa.

'Flymo' on rekisteröity tavaramerkki.


A

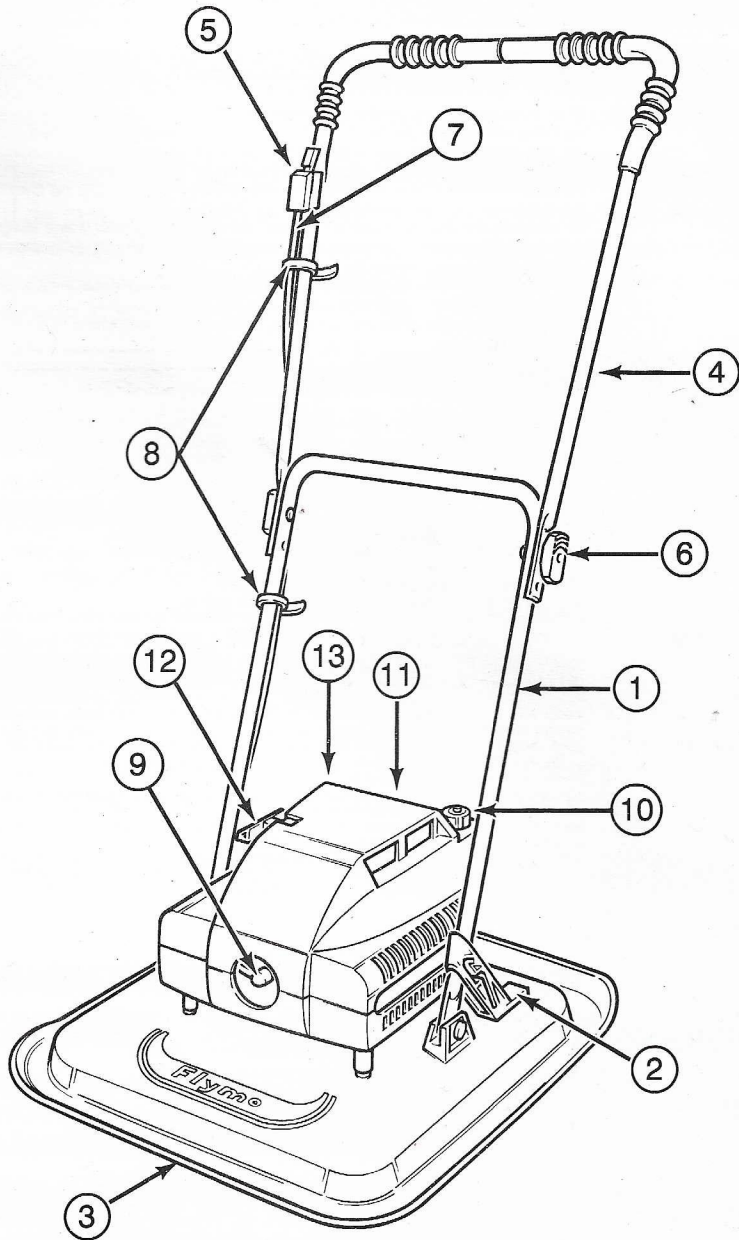


B

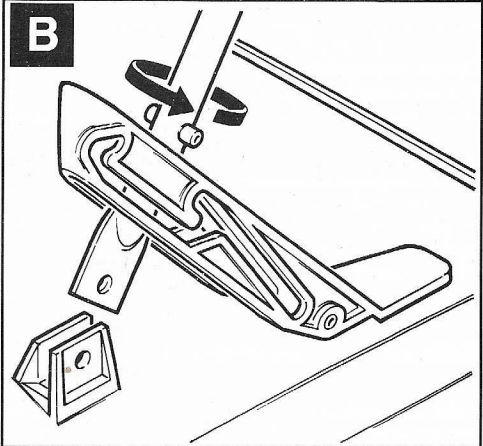


C











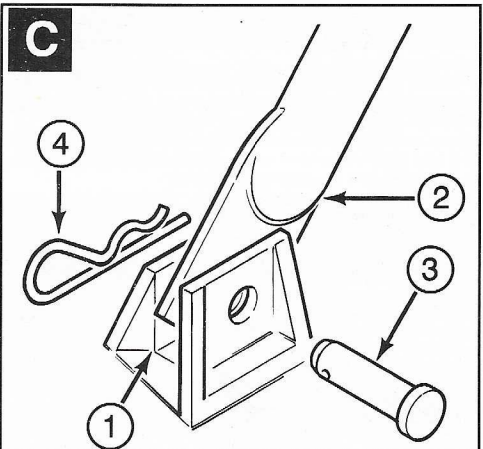


D

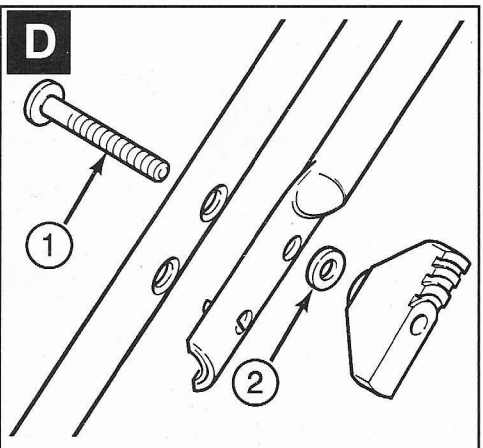

E

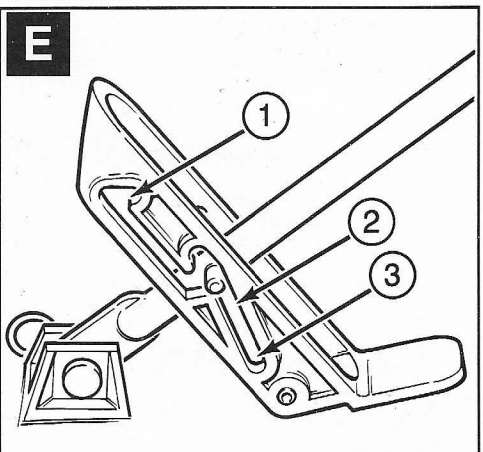

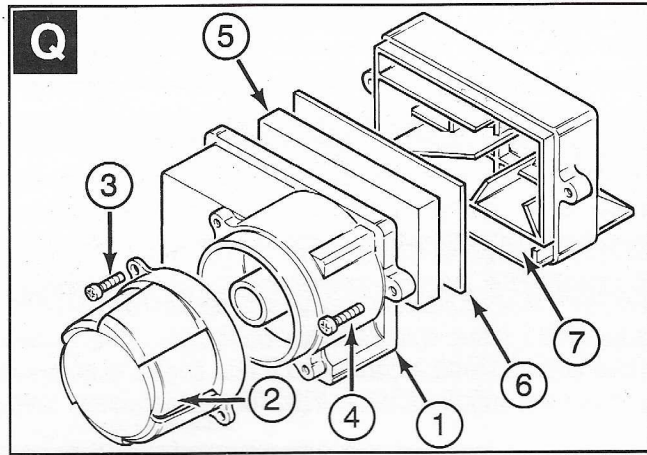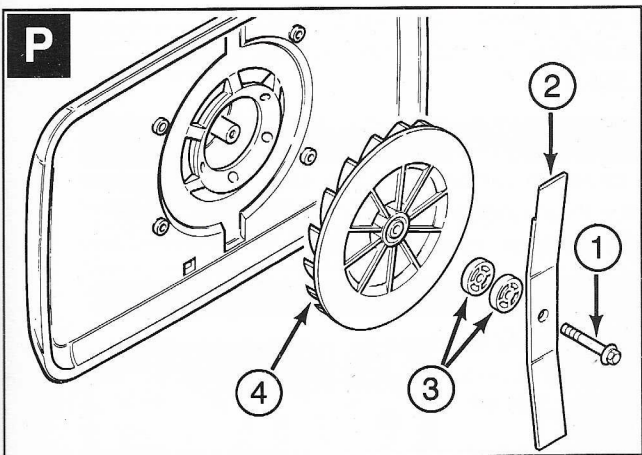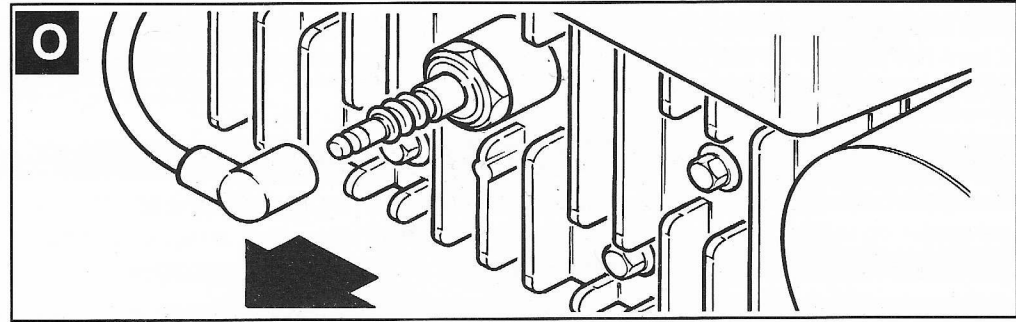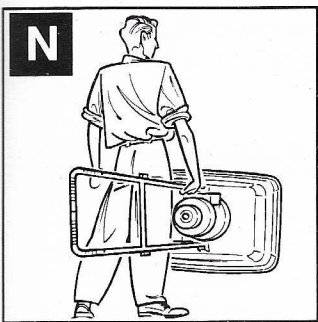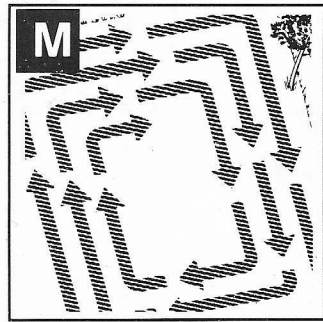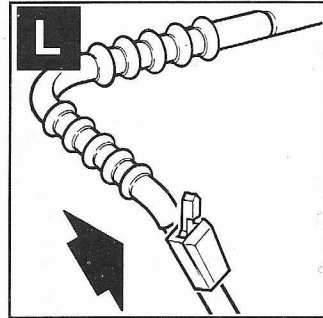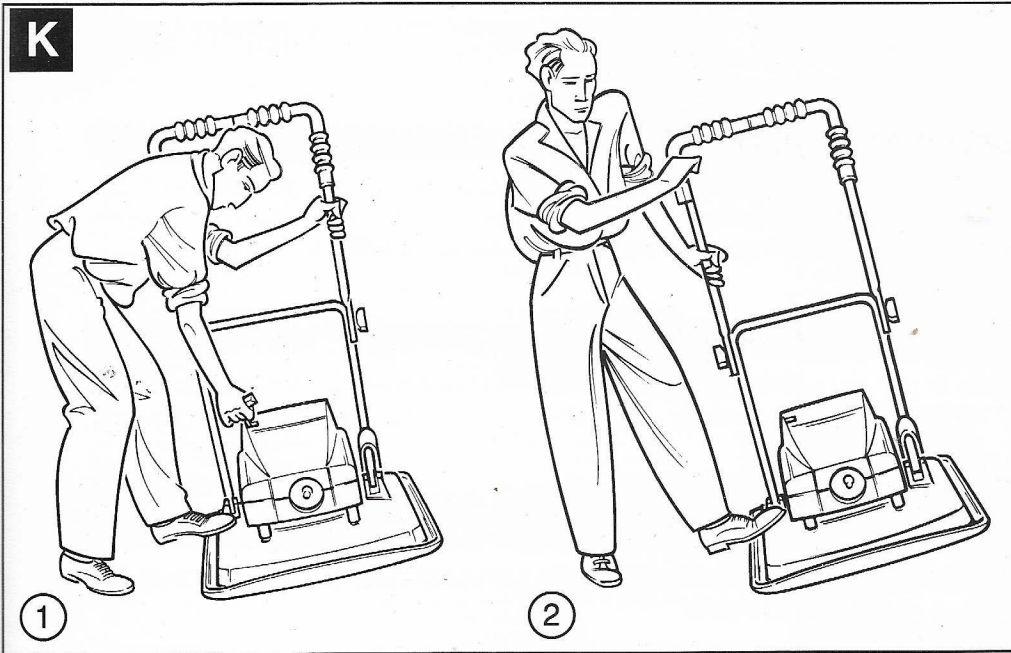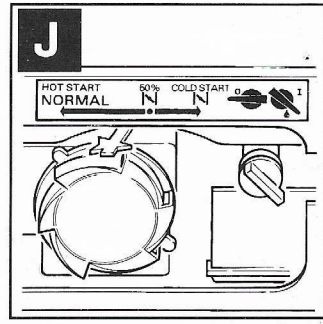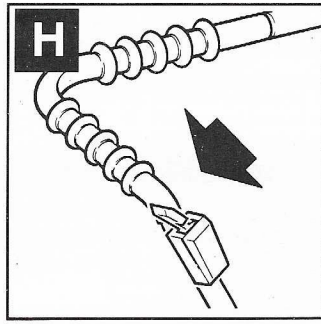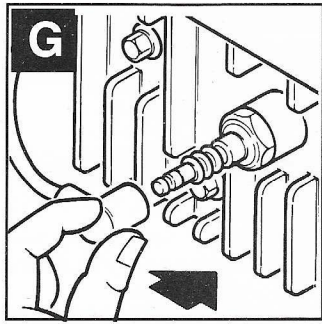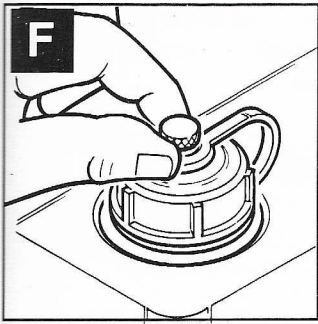



If not used properly this lawnmower can be dangerous.

This lawnmower can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawnmower. The operator is responsible for following the warnings and instructions in this manual and on the lawnmower.

Before using your lawnmower

1. Know your controls.
2. Read this owners manual carefully.
3. Learn how to stop the engine quickly in any emergency.
4. Make sure the lawn is clear of sticks, stones, bones, wire and debris. They could be thrown by the blade.
5. Stop the engine and disconnect spark plug lead before checking and working on the lawnmower.
6. Before using always visually inspect to see that blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades together with their fixings in sets to preserve balance.
7. Damaged blades and worn bolts are major hazards. Check all nuts, bolts and screws often.
8. Always be sure the lawnmower is in a safe operating condition. Use only replacement parts made and guaranteed by Flymo.
9. Add fuel **BEFORE** starting the engine. Avoid spilling fuel and do not fill the tank while the engine is running or while you are smoking.
10. Do not mow whilst people, especially children, or pets are in the mowing area.
11. Do not mow barefoot or in open sandals. Always wear suitable clothing, gloves and stout shoes.
12. Disengage all blade and drive clutches before starting.
13. Start the engine carefully with feet well away from the blade.
14. Do not operate the engine in a confined space where exhaust fumes (carbon monoxide) can collect.
15. Stop the engine whenever you leave the lawnmower.
16. Stop the engine before pushing the lawnmower across surfaces other than grass.
17. Do not allow children or people unfamiliar with these instruction to use the lawnmower.
18. On slopes or wet grass, be extra careful of your footing.
19. Do not mow on steep slopes.
20. Never cut grass by pulling the lawnmower towards you.
21. Do not overspeed the engine or alter governor settings. Excessive speed is dangerous and shortens lawnmower life.
22. Store fuel in a cool place in a container specifically designed for the purpose. In general plastic containers are unsuitable.
23. Never pick up or carry a lawnmower when it is operating.
24. Stop if you hit an object, and immediately disconnect the spark plug lead. Do not use your lawnmower until you are sure that the entire lawnmower is in a safe operating condition.
25. Always keep the lawnmower on the ground when mowing. Tilting or lifting the lawnmower may cause stones to be thrown out.
26. Do not mow in the rain or leave the lawnmower outdoors while it is raining.
27. Do not use the lawnmower if there is excessive vibration. This could damage the machine and may be dangerous.
28. Do not clean with chemicals, petrol or solvents, some can destroy critical plastic parts.
29. Use only genuine Flymo parts and accessories specified for this product.

2 Product Rating Label

Every Flymo product is uniquely identified by a silver and black product rating label. On the Flymo L38 and L47 this can be found on the rear part of the hood.

To ensure you have full product information when obtaining spares or advice from one of our approved service centres, or if you need to contact Flymo's own customer service department, you should make a note in the space provided of the information shown in fig.1. It will also be useful to make a note of the date and place of purchase before you return your guarantee card.

Do not attempt to read the product rating label when using this lawnmower.

Fig.'1' showing typical Product Rating Label

Flymo	Made in England	MODEL
Product No	Serial No	
↑	↑	↑
Product Number	Serial Number	Model No.
.....


Date of Purchase

Place of Purchase

* PLEASE KEEP PROOF OF PURCHASE *

IMPORTANT - FUEL ADVICE

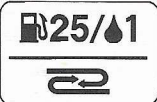

- Petrol engined lawnmowers are ideal for the larger garden. To ensure safety and efficiency when using your Flymo L38 or L47 lawnmower please note the following:
- Read the engine owner's manual supplied with your lawnmower.
-  Your lawnmower has a 2-stroke engine which runs on fuel of 1 part of oil to 25 parts of petrol.
- Do not use standard 2-stroke mixture as supplied by garages, neat petrol or multigrade oil.
- Use Flymoil 2-stroke oil or an approved quality SAE 30 2-stroke oil, mixed with fresh REGULAR grade unleaded petrol.
- Make sure the fuel is well mixed before use.
- Wipe dirt and grass clippings from the fuel tank filler cap to avoid getting dirt into the fuel tank.
- Do not fill the fuel tank in an enclosed area; when the engine is hot or while you are smoking.
- Fuel should be stored in a cool place away from naked flames.
- Your carburettor is pre-set, no further adjustment is required.

IMPORTANT - FUEL ADVICE

Fitting the Lower Handle to the Lawnmower

With the lawnmower on the ground:

1. Place the lower handle (A1) through the up-stop lever (A2) until the pin on the handle is located in the slot on the up-stop lever. **See fig. 'B'**.
2. Place the end (C2) of the lower handle into the slots (C1). Insert the pins (C3) and secure with the retaining clips (C4).

Fitting the Upper Handle to the Lower Handle

1. Ensure the Start/Stop Switch (A5) is on the right hand side when viewed from the rear.
2. Align the lower and upper handles (**see fig. 'D'**). Locate the bolts (D1), washers (D2) and secure with the handle knobs (A6).
3. Secure the cable (A7) to the handles with the clips (A8) provided. Ensure the cable is not trapped between the handles.

Handle Position

The handle position can be adjusted as follows:

1. Press down the up-stop lever (A2).
2. Position as required:
E1 - Parking
E2 & E3 - Mowing or Storage.

Starting and Stopping



WARNING

Never operate the lawnmower when you are tired, ill or under the influence of alcohol, drugs or medicine.

Always start the lawnmower with feet well away from the blades.

Keep hands and feet away from the blade, a rotating blade cannot be seen.

Fill with the correct fuel mix - Read FUEL ADVICE carefully - BEFORE starting your lawnmower.

Do not start your lawnmower while people especially children or pets are in the mowing area.

To Start your Lawnmower

1. Move the handle to the Parking position (E1). Open the fuel tank air vent screw (A10). **See fig. 'F'**.
2. Open the fuel tap (A13). **See fig. 'J'**. Connect the spark plug lead (A9). **See fig. 'G'**.
3. Move the Start/Stop Switch (A5) to the 'start' position. **See fig. 'H'**.
4. Set the control lever (A11) to 'cold start' when the engine is cold or 'normal' when the engine is hot. **See fig. 'J'**.
5. With your left foot on the hood (A3), tilt the lawnmower towards you. **See fig. 'K1'**. This prevents a ring being cut in your lawn.
6. Pull the starting handle (A12) gently until you feel a resistance, return the starting handle slowly.
7. Pull the starting handle firmly towards you to its full extent.
8. Allow the engine to reach its full running speed then gently lower the lawnmower to the ground.
9. When the engine has warmed up make sure the control lever (A11) is in the 'normal' position.

To Stop your Lawnmower

1. Move the Start/Stop Switch (A5) to the 'stop' position. **See fig. 'L'**.
2. As the engine dies, tilt the lawnmower towards you. **See fig. 'K2'**. This prevents a ring being cut in your lawn.
3. Put the handle in the Parking position (E1).
4. When the engine has stopped, lower the lawnmower to the ground.
5. Close the fuel tap and the fuel tank air vent screw (A10).



WARNING

Blade continues to rotate after the machine is switched off, rotating blades can cause injury.

NEVER USE MORE THAN 3 CUTTING HEIGHT SPACERS.

SPACERS MUST ONLY BE FITTED BETWEEN THE BLADE AND THE FAN AND NEVER BETWEEN THE BLADE AND THE BOLT.

Stop the engine before leaving your lawnmower unattended or before moving it over surfaces other than grass.

Keep hands and feet away from the blade, a rotating blade cannot be seen.

Mowing on Banks and Slopes can be dangerous. - Do not mow on steep slopes.

Adjusting the Cutting Height

1. Stop the lawnmower (see 'To Stop your Lawnmower') and disconnect the spark plug lead (A9).
2. Close the fuel tank air vent screw (A10), the fuel tap. Turn your lawnmower on its side.
3. Remove the bolt (P1) and blade (P2). See 'Removing and Fitting the Blade and Fan' for complete instructions.
4. For a lower cut - Add spacers (P3).
For a higher cut - Remove spacers.
5. Install the blade (P2) and the bolt (P1).

How to Mow

1. Place the handle in the Mowing position (E2). Start from the edge, mow in a clockwise direction. See fig. 'M'.
2. Mow twice a week in the growing season. Your lawn will suffer if more than one third of its length is cut at one time.

Caring for your Lawnmower



WARNING

Blade continues to rotate after the machine is switched off, rotating blades can cause injury.

It is very important that you keep your lawnmower clean.

Grass clippings left in any of the air intakes, around the engine or under the deck could become a potential fire hazard.

Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts. Never carry a lawnmower when it is running.

If you do not intend to use your lawnmower for long periods it is advisable to follow this procedure after use:

1. Do not stop the engine.
2. Close the fuel tank air vent screw (A10) and fully close the fuel tap.
3. The engine will begin to stop, tilt the lawnmower. See fig. K2.
4. Once the engine has stopped, move the Start/Stop Switch (A5) to the 'stop' position. See fig. 'L'.
5. Disconnect the spark plug lead (A9). See fig. 'O'.

Cleaning

1. Remove grass from under the hood (A3) with a piece of wood or similar.
2. Using a soft brush - remove the grass clippings from around the engine and from all air intakes.
3. Remove the fan, see 'Removing and Fitting the Blade and Fan', and clean with a soft brush.
4. Wipe over the surface of your lawnmower with a dry cloth.

Carrying your Lawnmower

Carry the lawnmower at the point of balance with the blade facing away from you. See Fig. 'N'.

Storing Your Lawnmower

Store in a cool, dry, damp-proof and safe place.

Maintenance - Removing & Fitting the Blade and Fan 5



WARNING

Ensure the Start/Stop Switch is in the 'stop' position, SEE FIG 'L', wait until the blade has stopped and disconnect the spark plug lead BEFORE attempting to remove or refit the blade.

Renew the metal blade after 50 hours mowing or 2 years whichever is the sooner - regardless of condition.

If the blade is cracked or damaged replace it with a new one.

Before using always visually inspect to see that blades and bolts are not worn or damaged.

ALWAYS HANDLE THE BLADE WITH CARE - SHARP EDGES COULD CAUSE INJURY.

NEVER USE MORE THAN 3 CUTTING HEIGHT SPACERS.

SPACERS MUST ONLY BE FITTED BETWEEN THE BLADE AND FAN AND NEVER BETWEEN THE BLADE AND THE BOLT.

Removing the Blade and Fan

1. Close the fuel tank air vent screw (A10) and the fuel tap. Place the lawnmower on its side (see fig 'P').
2. Hold the fan (P4) firmly and loosen the bolt (P1) with the spanner provided by turning it anti-clockwise.
3. Remove the bolt (P1), blade (P2), spacers (P3) and fan (P4).
4. Inspect items for damage/wear and clean as necessary. See 'Cleaning'.

Fitting the Blade and Fan

1. Place the lawnmower on its side (see fig 'P'), ensure the fan (P4) is correctly located on the keyway.
2. Locate the spacers (P3) onto the fan. Locate the blade (P2) onto the spacers (P3).
3. Place the bolt (P1) through the centre of the blade and spacers, tighten the bolt clockwise by hand.
4. Hold the fan (P4) firmly and tighten the bolt (P1) with the spanner provided.

Maintenance - Cleaning the Air Filter



WARNING

Do not oil the filters.

1. Follow the procedure described in 'Caring for your Lawnmower'.
2. Remove the two screws (Q4). Take off the filter cover (Q1).
3. Remove the two filters (Q5) and (Q6). Clean inside the filter cover (Q1) thoroughly.
4. Shake or tap the thick filter (Q5) to remove any dirt or dust.
5. Replace the thin filter (Q6) if it is contaminated with dust. New filters are available from your local Flymo Service Centre/Dealer.
6. Install the thick filter (Q5) in the filter cover (Q1). Place the thin filter (Q6) on top. **DO NOT CREASE THE FILTERS.**
7. Clean the filter body (Q7) with a small brush. Replace the filter cover (Q1) and the two screws (Q4).
8. **DO NOT REMOVE** the cap (Q2) or screws (Q3) unless there is visual evidence of grass or dirt.



WARNING

Ensure the Start/Stop Switch is in the 'stop' position, SEE FIG 'L' , wait until the blade has stopped and disconnect the spark plug lead BEFORE attempting any maintenance or adjustment. Do not attempt any maintenance on your lawnmower when the engine is hot

For trouble free mowing next season make sure your lawnmower is serviced after the last cut of the year as follows:

1. Allow the engine to cool. Drain the fuel tank (Fuel left in the engine becomes stale and causes difficult starting).
2. Remove the spark plug lead and spark plug. Pour one teaspoon of oil through the spark plug hole. Pull the starting handle two or three times. This will distribute oil on the internal surfaces of the engine. Inspect, clean and replace the spark plug. If a new spark plug is required contact your local approved Flymo Service Centre/Dealer. Do not re-connect the spark plug lead.
3. Clean the air filter. See 'Cleaning the Air Filter'.
4. Renew the blade if it is cracked, damaged or bent. Renew the blade bolt if necessary. See 'Removing and Fitting the Blade and Fan' for complete instructions.
5. Use only genuine Flymo parts and accessories specified for this product.
6. Clean your lawnmower thoroughly. See 'Cleaning'.
7. Your local approved Flymo Service Centre/Dealer will carry out any service or repairs required.
8. Store your lawnmower in a cool, dry, damp-proof and safe place.

Fault Finding Hints

Engine Will Not Start

1. Check that the Start/Stop Switch (A5) is in the 'start' position.
2. Check that there is sufficient fuel of the correct mix in the fuel tank, the fuel tap is open and the fuel tank air vent screw is open.
3. Check that the control lever is in the correct position:-
'normal' - for a hot engine
'cold start' - for a cold engine.
4. The engine may have flooded. Remove and dry the spark plug.
5. Fuel mixture may be incorrect or stale - if so -replace.
6. Check that the blade bolt is tight. A loose blade bolt could cause difficult starting.
7. If the engine will still not start - disconnect the spark plug lead and consult you local approved Flymo Service Centre/Dealer.

Poor Flotation or Lack of Power


1. Disconnect the spark plug lead.
2. Clean the underside of the hood (A3), the air filter, the fan, around the engine and the air intakes.
3. Check that the engine control lever is in the 'normal' position.
4. Fuel mixture may be incorrect or stale - if so - replace.
5. If poor flotation or lack of power persists - disconnect the spark plug lead and consult your local approved Flymo Service Centre/Dealer.

Excessive Vibration

1. Disconnect the spark plug lead.
2. Check that the blade is correctly fitted. See 'Fitting and Removing the Blade and the Fan'.
3. If the blade is damaged or worn, renew the blade.
4. If vibration persists - do not use - disconnect the spark plug lead and consult your local approved Flymo Service Centre/Dealer.

Service Recommendations

1. To ensure maximum life and reliability from your Flymo product we recommend that it is serviced regularly by an approved Flymo Service Centre/Dealer. They have the equipment, facilities and trained personnel to advise you of the service requirements of your machine. Depending on the machine use, they will recommend one of the various types of service which are designed to ensure the maximum economic service life of your machine.
2. **IMPORTANT**
The increasing popularity of power lawnmowers puts a great workload on the Service Facilities. We recommend that you have your lawnmower serviced between October and January to ensure a flying start to your mowing season.
3. See Approved Service Centres leaflet for a list of local approved Flymo Service Centres.

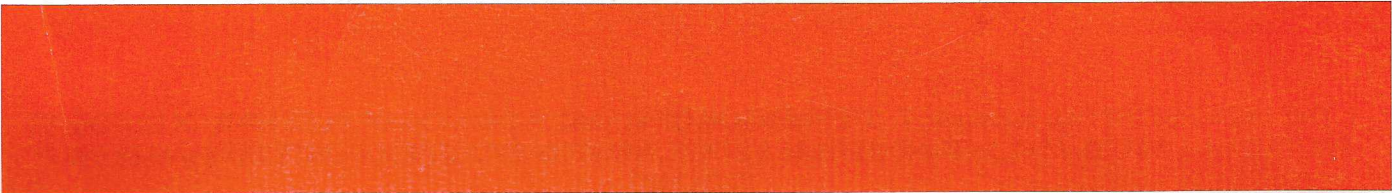

Flymo, a division of Electrolux Outdoor Products Ltd.,
Aycliffe Industrial Estate
NEWTON AYCLIFFE
Co. Durham DL5 4UP
Telephone · Aycliffe (0325) 300303

Flymo Registration Card

Please complete and return within 7 days of purchase to Flymo.

Date of Purchase:

Name:

Address:

Tel. No:

From which Retailer did you buy the mower

Dealer:


Town: Price Paid:

Use: Private Commercial

Please could you indicate below some details about your previous mower:—

- | | | | | |
|-------------------|--------------------------|----------------|--------------------------|--------------------------------------|
| No previous mower | <input type="checkbox"/> | Flymo | <input type="checkbox"/> | |
| Hand mower | <input type="checkbox"/> | Qualcast | <input type="checkbox"/> | Air Cushion <input type="checkbox"/> |
| Electrical mower | <input type="checkbox"/> | Black & Decker | <input type="checkbox"/> | Wheeled <input type="checkbox"/> |
| Petrol mower | <input type="checkbox"/> | Suffolk | <input type="checkbox"/> | Cylinder <input type="checkbox"/> |

Other: _____

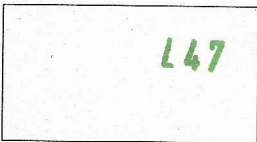

5137870-00

AFFIX
STAMP
HERE

Flymo,
Preston Road,
Aycliffe Industrial Estate,
Newton Aycliffe,
County Durham,
DL5 6UP.